

Patented




7500 Deco™

Installation Instructions

Towards ridge

The Snow Defender™ 7500 Deco™ is for standing seam roofing only. It is designed to fit standing seam panels in seam width up to 3/8" and most 1" to 1-3/4" high. It is not designed for seams below 1". Using a 7/32" hex bit unscrew the set screws till they are flush on the inside wall. Place the guard on the seam of the roof. The snow guard blade needs to be towards the eave. With your hand, apply even pressure on the top of the 7500 Deco™. Torque all set screws in an alternate fashion. Set screws are to be torqued at a maximum of 220 inch pounds.

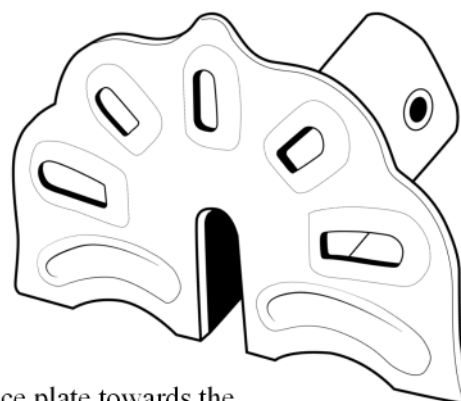

Face plate towards the eave.


Note: Most electric & cordless drills will not achieve 220 inch pounds. It is recommended to use a torque wrench.

Failure to install an adequate amount of snow guards and in the proper pattern will void the warranty. Visit www.snowdefendercalculator.com to use our snow guard calculator to determine the amount needed.



For warranty details visit www.snow-defender.com

Ridge of Roof

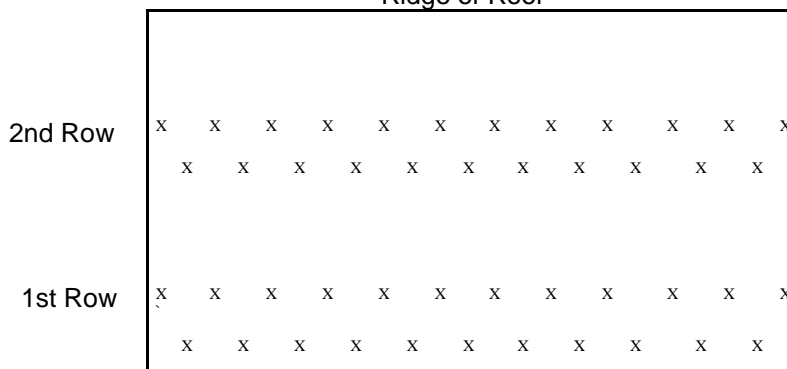

Eave of Roof

Above example is based on Metal Roof Panels being 36" Panels with 9" rib spacing.

Remember it is very important to install the guards properly with the correct quantities. Do not only put snow guards over doorways, walkways, etc.



137 Newport Rd
Leola PA 17540

www.levisbuildingcomponents.com